



## **A-PC01 PanoCam CAMERA SETUP GUIDE**

1. Access the camera's web interface to change its settings.
  - Default IP address: 192.168.1.179
  - Default Username: admin
  - Default Password: admin123
  - Default RTSP Main Stream link: `rtsp://camera's IP address/ch1`
  - Default RTSP Substream link: `rtsp://camera's IP address/ch2`
  - Default ONVIF login: admin
  - Default ONVIF password: 123456

Instructions on accessing the camera's web interface are provided in video "How to Change the IP Address of your AREC Device" on the ADENA Limited YouTube Channel

– <https://www.youtube.com/c/ADENACHannel/>

2. Detailed explanation of the web interface is provided in the A-PC01 User Manual, available here: [www.a-dena.com/technical-information](http://www.a-dena.com/technical-information)

If you require assistance setting up the camera, please contact us for support at [www.a-dena.com](http://www.a-dena.com)



[www.a-dena.com](http://www.a-dena.com)  
[info@a-dena.com](mailto:info@a-dena.com)